


Step-by-step guide

1. Connect to the admin port of the clock using the Ethernet configuration tool, and navigate to the Notifications tab under Network tab.

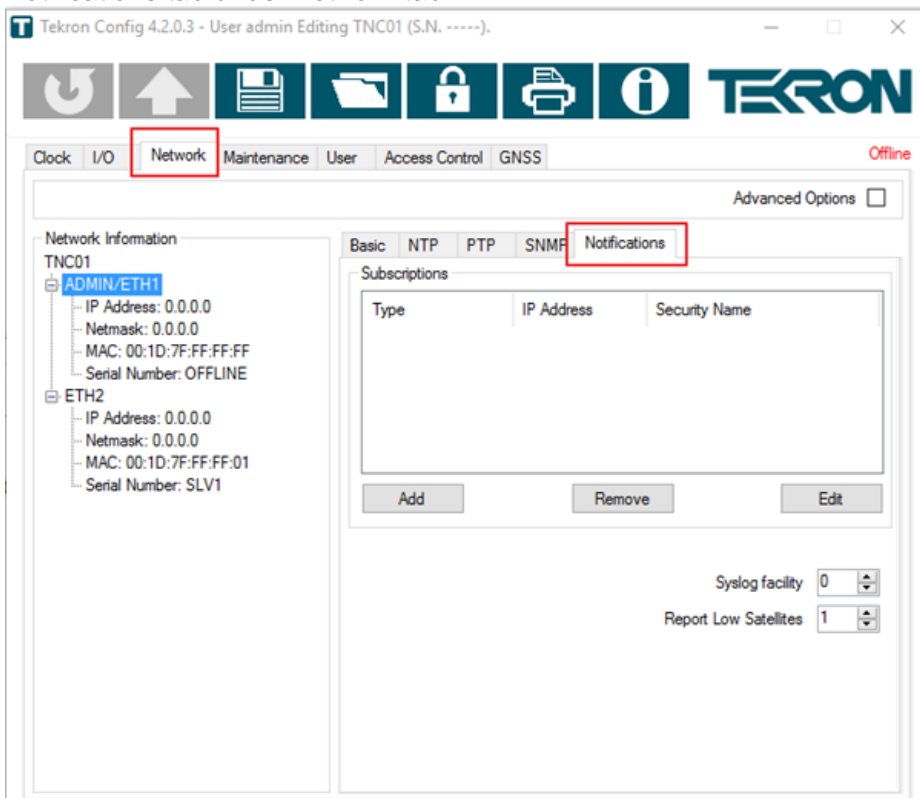

2. Press the Add button and select the settings:
 - a. Type: SNMPv3
 - b. IP Address: Your PC address
 - c. Security Name: Leave blank
 - d. Press Ok to store the settings.

