



## How to change the IP address of your PC

1. Right Click on the Network icon in the bottom right hand corner of your PC window

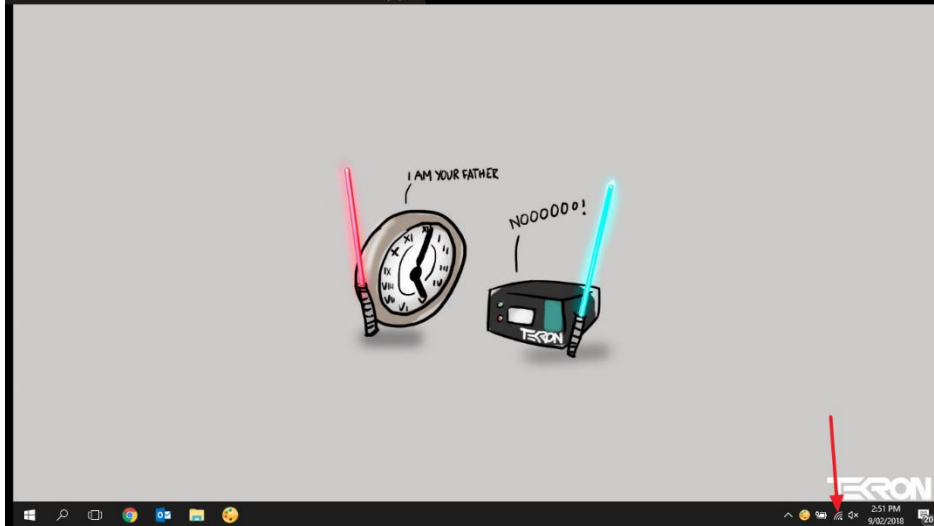


- 1.
2. Select "Open Network and Sharing Centre"
3. Left Click on the Ethernet icon

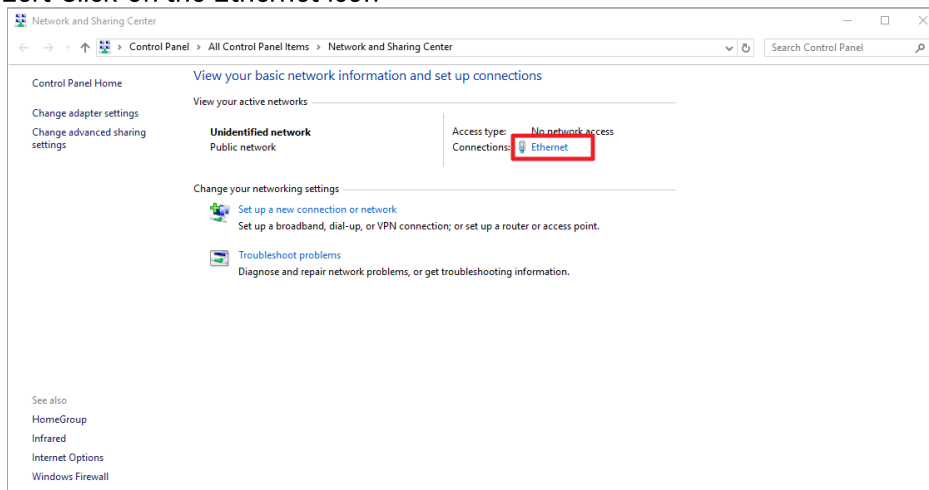


4. Click on the Properties Button.


1. Note: Access to this section could be restricted due to administration privileges.

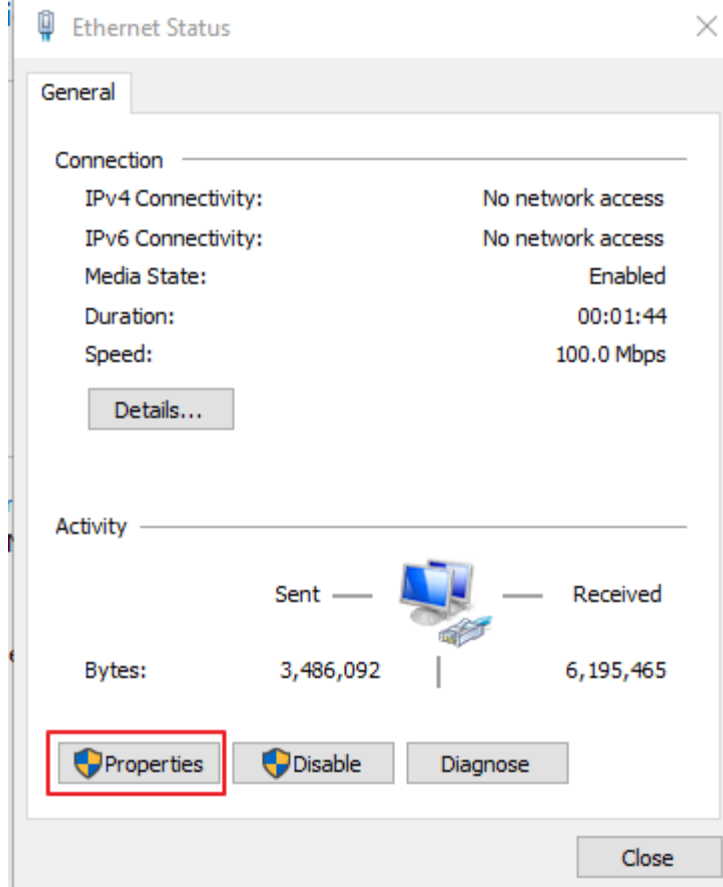

5. Select Internet Protocol Version 4 and press Properties

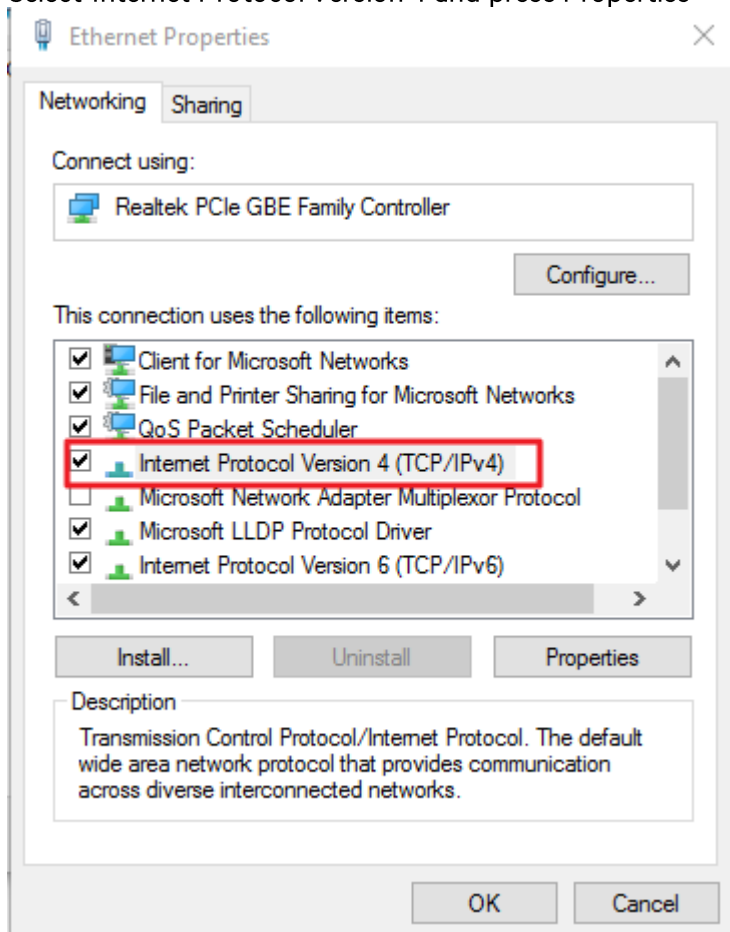

6. For setting a static IP address, select the radio button "Use the following IP address"

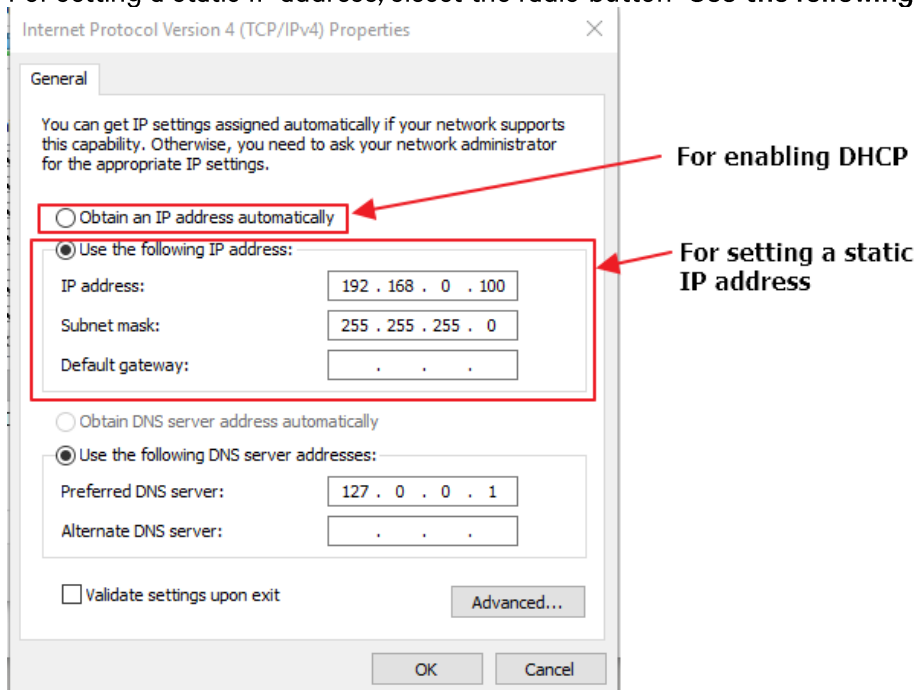

7. For setting your PC to DHCP, select the radio button "Obtain an IP address automatically"

To set your PC to be on the same subnet as a clock, set the first three octets of the IP address to be the same as the clock. Set the last octet to be different.

e.g. If the clock has the IP address: 168.192.96.100  
Set your PC to be on: 168.192.96.X where X can be any number apart from 100.

