

## How to change the Password on a clock

Note: This is using configuration tool v4.2.1.10

To change the password of your clock (when security is enabled);

1. Log into the clock as the admin
2. Navigate to the User tab
3. Select the user to change the password of
4. Under "User Preferences", select "User Must Change Password"
5. Store the settings to the clock
  - a. If you are the administrator you will be logged out and required to relogin.

