

Isolated Timing Distributor

QUICK START GUIDE


QUICK SETUP

1. Install the ITD in the desired location
2. Connect to power, ensuring correct voltage is used
3. Connect the reference timing input (P2)
4. Once the ITD is fully setup, connect the clock outputs (P3 - P6) to your device/s



DEVICE CONNECTION TIPS

- It's recommended a shielded twisted pair cable is used to connect devices to the TTL port
- When P2 is a copper input, the line can be terminated by linking the '+' and '-' pins of the B terminal

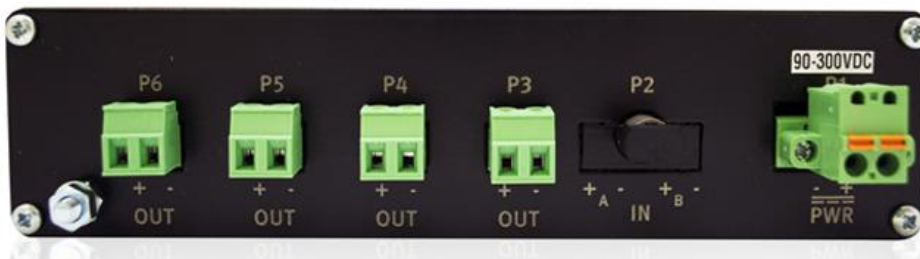

Rear Panel – Inputs/Outputs (2 Pin out)



Rear Panel – Inputs/Outputs (Fiber out)